



Application Instructions




STEP 1: Remove protective plastic of splice tape.

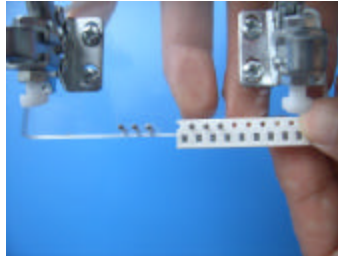

STEP 2: Place one pre-cut tape into orientation clamp.

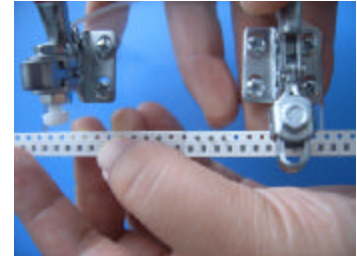

STEP 3: Place second pre-cut tape into orientation clamp.

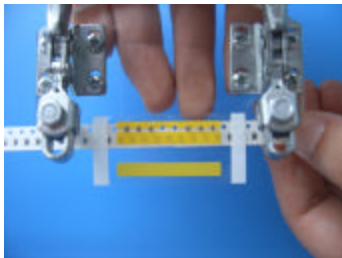


STEP 4: place splice tape with hole onto cover tape. Press firmly and remove from orientation clamp.



STEP 5: Fold plastic card over carrier tape and press onto bottom cover tape.



STEP 6: press both sides of splice tape firmly onto carrier tape.

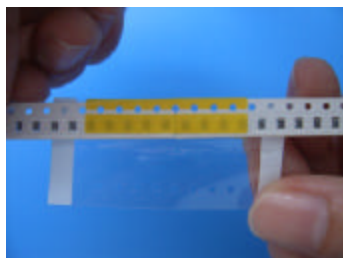

STEP 7: Remove hard plastic card from splice tape.



TOP VIEW
Finished Splice