



Application Instructions




STEP 1: Place splice clip into splice tool points up.

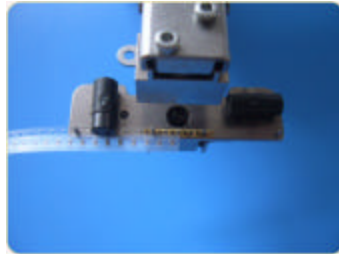


STEP 2: Place one pre-cut tape into splice tool. Turn barrel to hold tape.

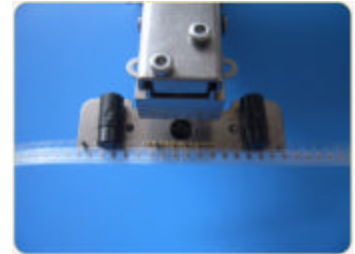

STEP 3: Place second pre-cut tape into splice tool. Turn other barrel to hold tape.

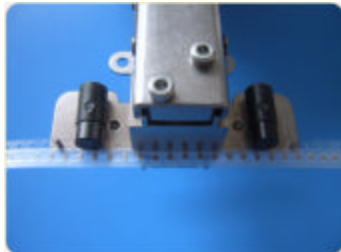

STEP 4: Squeeze handle and compress splice tool.

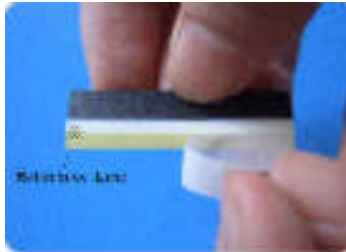

STEP 5: Peel off part of paper liner from splice tape using the edge guide.



STEP 6: Align splice tape with carrier tape using the edge guide.



STEP 7: Press splice tape onto cover tape and remove hard plastic card.



TOP VIEW
Finished Splice



BOTTOM VIEW
Finished Splice